

pierre cardin

— BABY • K I D S • Y O U N G —
ROOM

Montaj ve Kullanım Klavuzu

Assembly and User Manual / Montage- und Bedienungsanleitung
/ Installation et Mode d'Emploi

Ürün kodu / product code / code du produit / artikelnr

M 02 1999 40

Ürün adı / Product name / Artikelbezeichnung /
Nom du produit

1999-40 SOLO PLUS MONTESSORI

Ürün Ebadı / Product size / Artikelmaße /
Dimensions du produit

2000x970x1380h



Bu ürün 2 kişi tarafından kurulmalıdır.
This module must be assembly by two persons.
Dieses produkt sollte von 2 personen montiert
werden.
Ce module doit être installé par 2 personnes.

Bu modülün kurulu için gerekli araçlar


The necessary tools required for assembly of this module

Notwendige Werkzeuge für die montage

Outils nécessaires pour l'installation de ce module.




x4

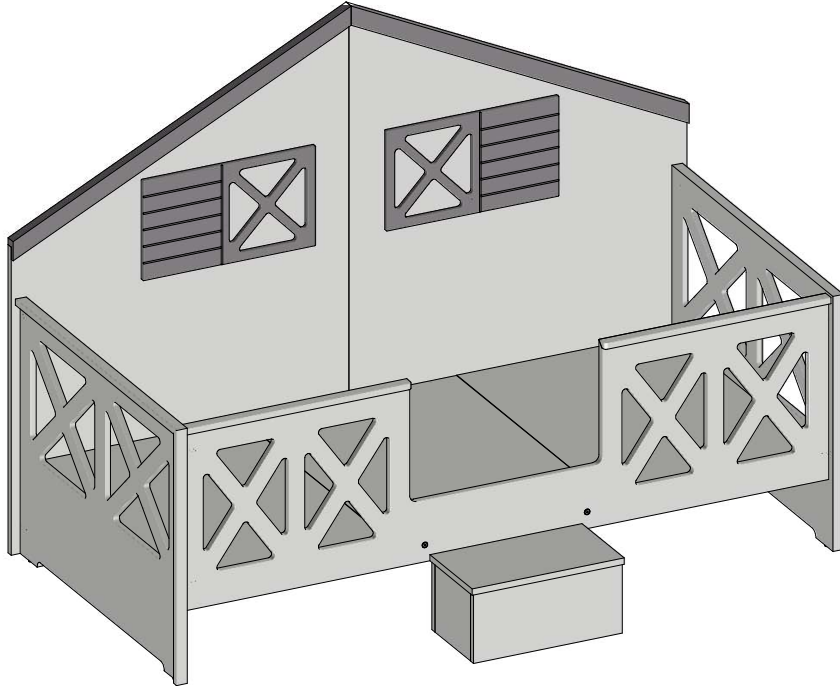


Sıra	Görsel	Parça Adı	Parça Kodu	Parça Ad.
1		Sağ arka parça	Y PRC 1999 40 133	1 ADET
2		Sol arka parça	Y PRC 1999 40 134	1 ADET
3		Baza ön parça	Y PRC 1999 40 074	2 ADET
4		Baza arka parça	Y PRC 1999 40 017	2 ADET
5		Üst parça	Y PRC 1999 40 001	1 ADET
6		Baza yan parça	Y PRC 1999 40 045	2 ADET
7		Yatak altı	Y PRC 1999 40 052	3 ADET
8		Arka kayıt	Y PRC 1999 40 062	2 ADET
9		Sağ yan parça	Y PRC 1999 40 005	1 ADET
10		Sol yan parça	Y PRC 1999 40 004	1 ADET
11		Korkuluk	Y PRC 1999 40 060	1 ADET
12		Dekor	Y PRC 1999 40 064	2 ADET
13		Minifiks dübelli mil	H MB MNF 0004	12 ADET
14		Cam kafa	H MB MNF 0005	20 ADET
15		Raf pimi poligrit	H MB RFPM 0003	8 ADET
16		Silindirik somun	H MB SOMN 0001	12 ADET
17		6x60 Çekirge	H MB VIDA 0001	12 ADET
18		Çift taraflı mil	H PCM MNF 001	4 ADET
19		Tapa minifix	H PCM MNF 002	20 ADET
20		Kavalye	Y 02 0999 07-0001	28 ADET
21		3,5x30 Sunta vidası	H MB VIDA 0009	22 ADET


①

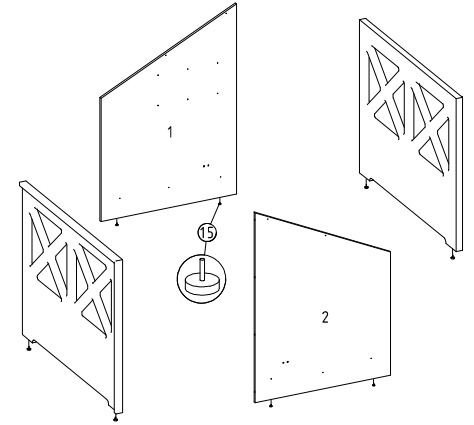


②

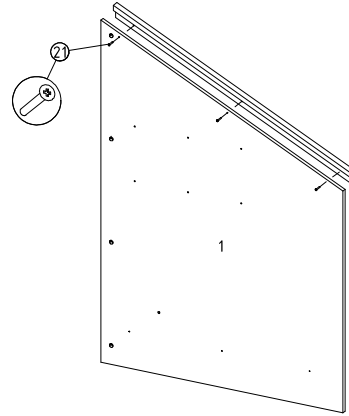


③

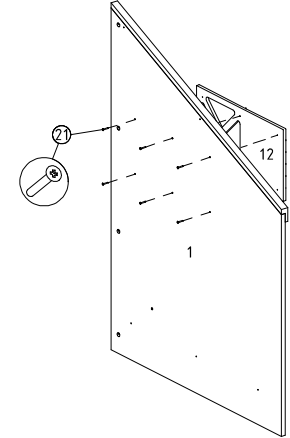


④

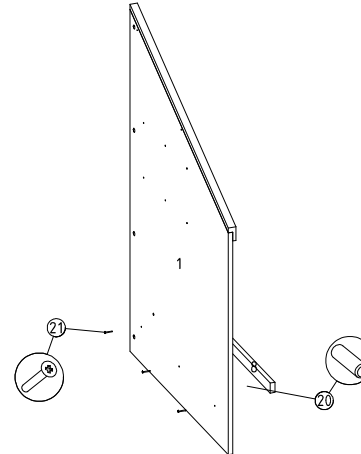


⑤

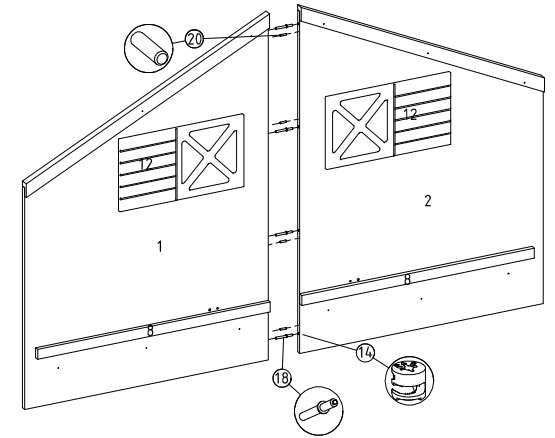


⑥

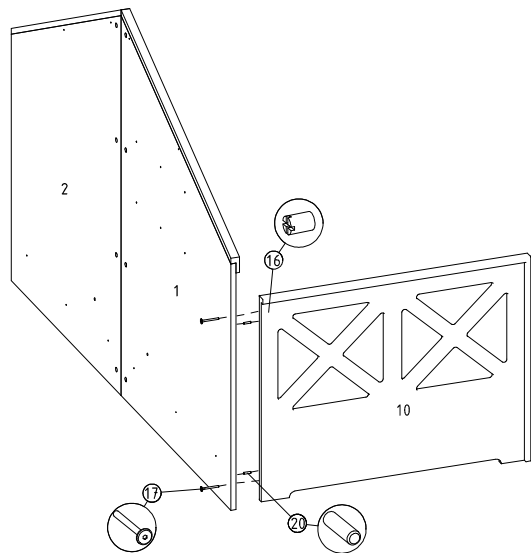


⑦

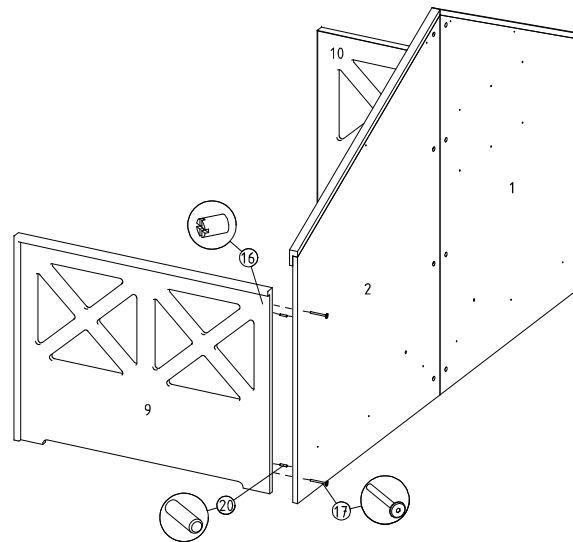


⑧

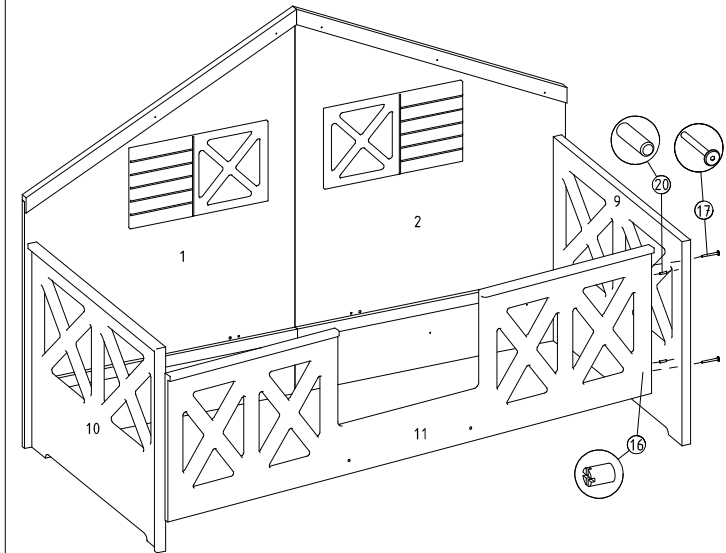

⑨

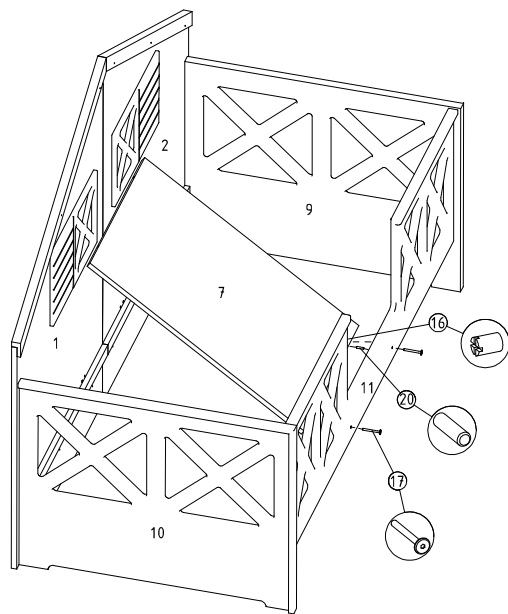

⑩

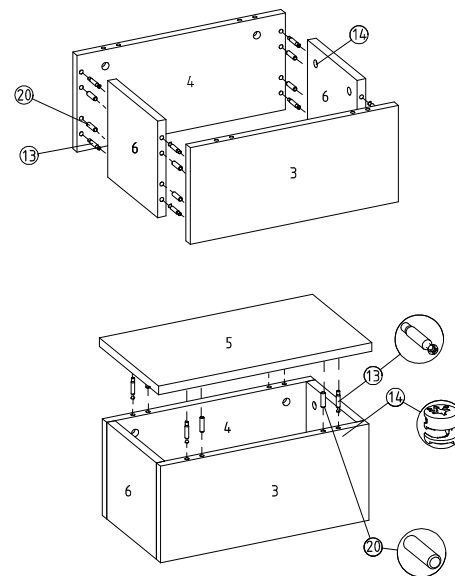

⑪

